

DASH


USER GUIDE



FRANKENSTEIN RESEARCH - FAELLEDVEJENS PASSAGE 2, 1, 2200 COPENHAGEN N, DENMARK
HELP@FRANKENSTEINRESEARCH.COM - FRANKENSTEINRESEARCH.COM



DASH: WHAT IS INCLUDED

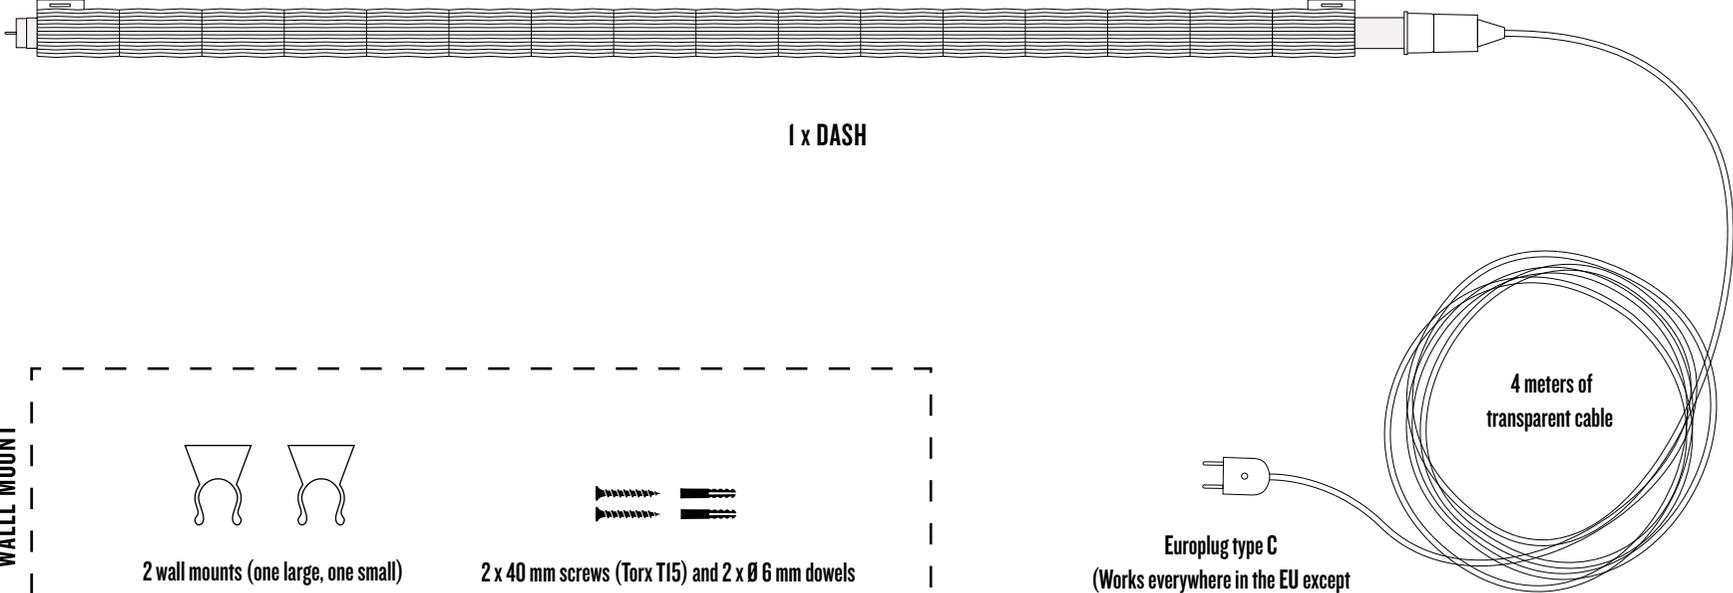

WALL MOUNT

2 wall mounts (one large, one small)

2 x 40 mm screws (Torx T15) and 2 x Ø 6 mm dowels

CEILING MOUNT

5 meters stainless steel wire


2 x metal screw nipples

2 x ceiling mounts


5 x cable clips

2 x 35 mm screws (Torx T15) and 2 x Ø 6 mm dowels


HANGS FROM CEILINGS, MOUNTS TO WALLS, STANDS ON FLOORS

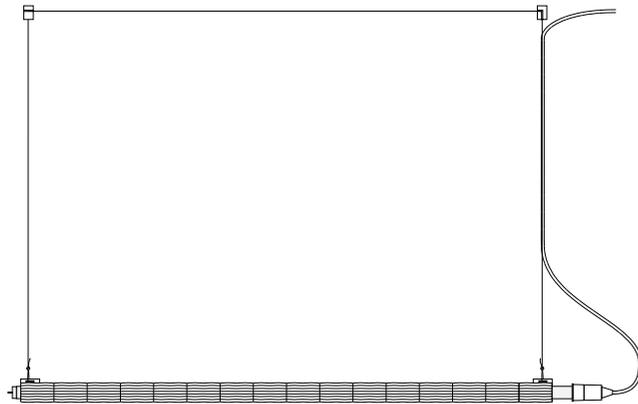

 Ceiling-mounted, Dash offers direct, non-blinding, warm white light downwards, and diffused, colored light in all other directions. With its length of 120 cm, it lights up the full length of a typical dining or work table.




Dash mounts to any wall horizontally, vertically, or at whatever other angle you may fancy.

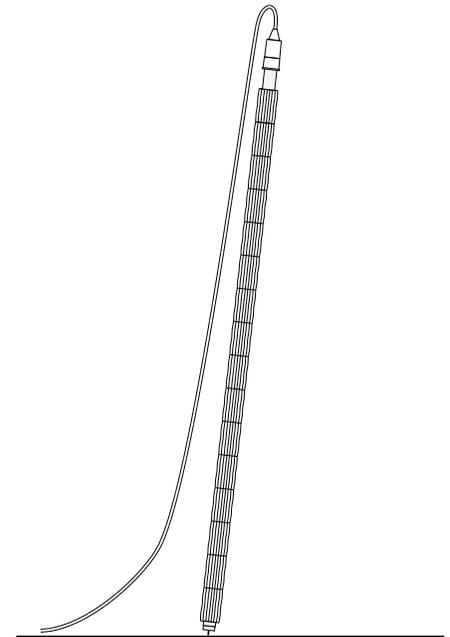

Dash stands on floors, in a corner or against a wall. Please note: This placement is not advised if you have pets, small children, or clumsy friends.


HANG FROM CEILING

1

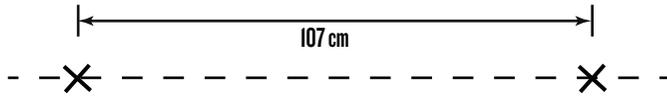


Measure two holes for the two ceiling mounts that come with the lamp. Distance: 107 cm.

2

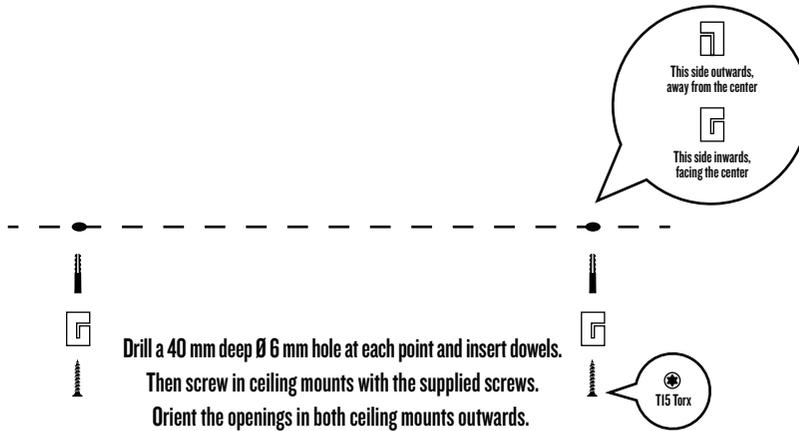


Drill a 40 mm deep Ø 6 mm hole at each point and insert dowels. Then screw in ceiling mounts with the supplied screws. Orient the openings in both ceiling mounts outwards.

3

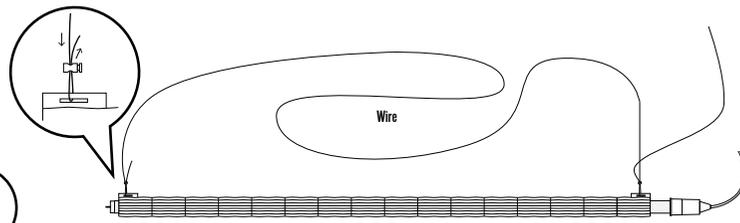


Place the lamp on table or other secure surface and attach the cable at each end: Lead the cable first through the screw nipple, then through the opening in the shade, then back through the screw nipple. Tighten with a flat screwdriver. The exact length of the wire will be adjusted later in step 5.

4

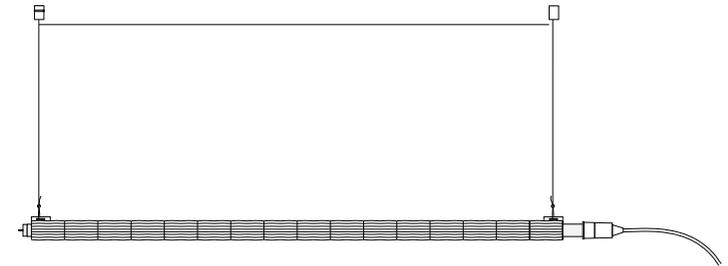


Take hold of two points on the wire, and lift up the lamp. Loop the wire through one ceiling mount, then through the other.

5

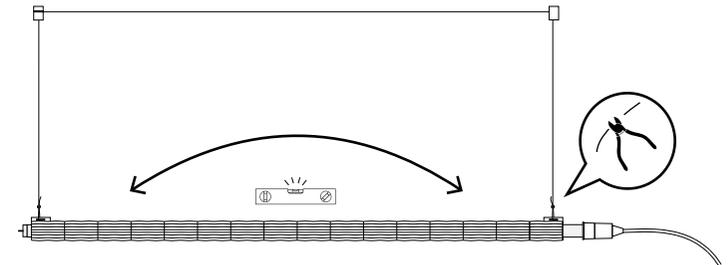


Adjust the desired height by lengthening or shortening the wire. A good distance between lamp and a tabletop is circa 70 cm. Level the lamp by gently pulling and pushing at either end. When satisfied, cut off excess wire with a wire cutter about 5 cm above the screw nipples.

6

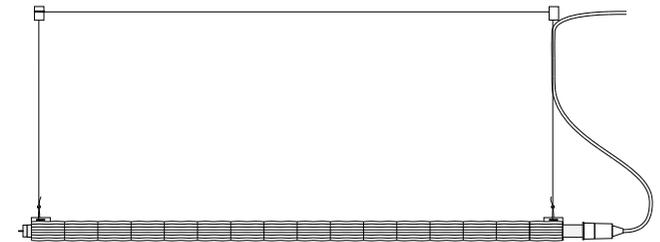


Connect cable to an outlet. If the outlet is in the ceiling, run the cable up along the nearest stainless steel wire, and fasten it to the wire with the supplied cable clips. Turn on.


MOUNT TO WALL

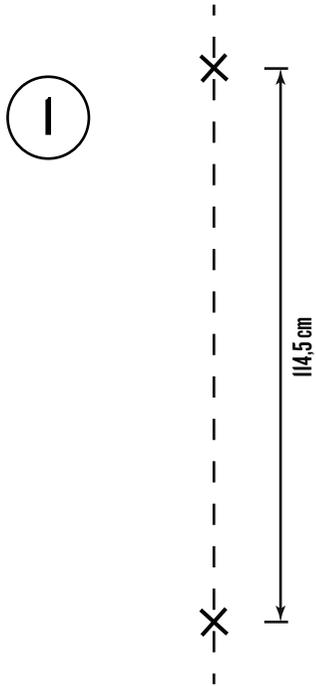

Measure two holes for the wall mounts that come with the lamp.
Distance: 114,5 cm. A precise distance is important for the lamp
to fit between the mounts. A distance slightly too long is
preferable to one slightly too short.

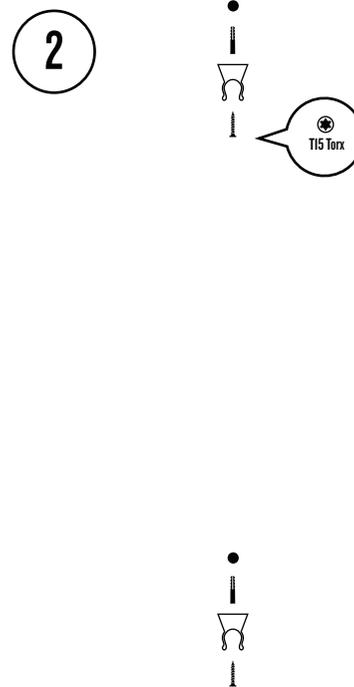


Drill a 40 mm deep \varnothing 6 mm hole. Insert dowels, then screw in the
two wall mounts with the included screws (T15 Torx heads). Place
the thicker wall mount where you want the cabled lamp-end
(usually downwards). Place the thinner wall mount at the other
end. Check distance: The measurement between the wall mounts
should be 112 cm or a little more.

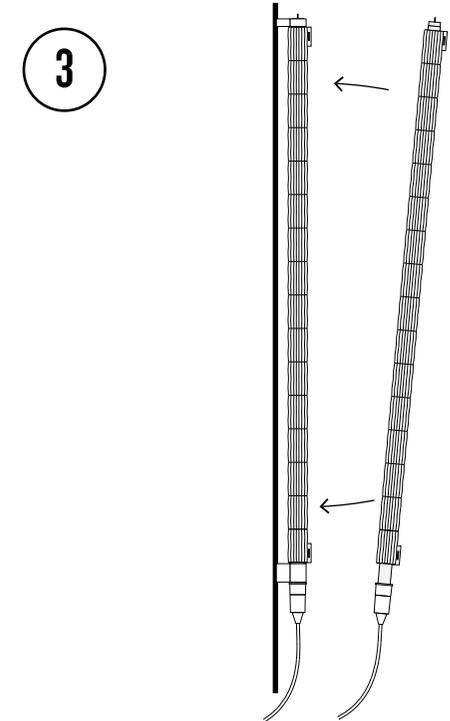

Push the lamp into the larger wall mount, then into the smaller
one. If the lamp does not easily fit between the wall mounts, they
might be too close together. Adjust as needed. Plug in and turn on.


STAND ON FLOOR

1

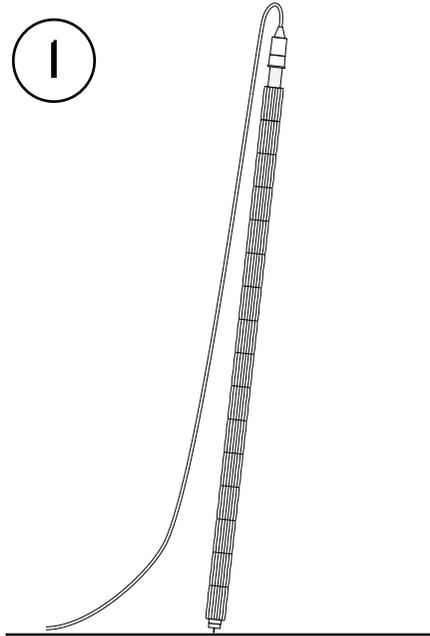


Stand Dash directly on the LED tube's metal legs, cable-end up.
Please note: This configuration is not advised if you have pets,
small children, or clumsy friends.

2

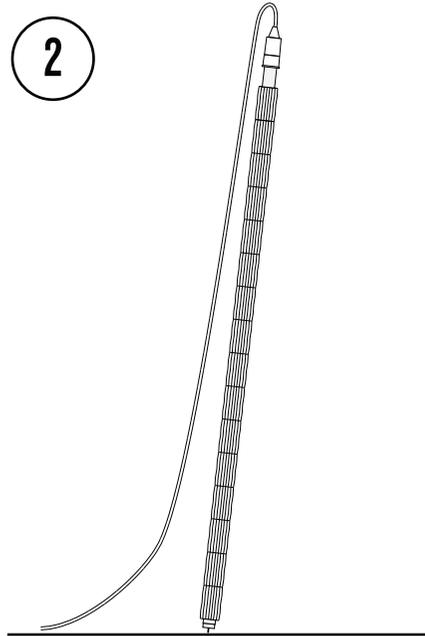

Lean it towards the wall at a suitable angle.
Orient the shade's gap towards the wall.

3

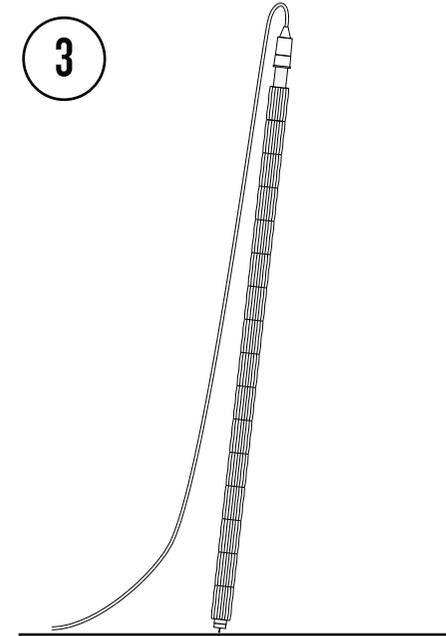

Plug in and turn on.